

Model 107 up to 07.1985
123
126 up to 08.1985
201 up to 12.1984

- Inspect all components - engine, transmission, shock absorbers, steering, power steering pump, rear axle, checking condition and for leakage. Remove lower engine compartment cover (6190) or noise encapsulation panel (9490).

Note:

Install the lower engine compartment cover or noise encapsulation panel only after all the other maintenance jobs have been completed.